


LE1258_SCK23XXX

		Spare part number	Spare part number	Colours available
1	Glass lid (BK: smoke black clear)	SSPA0230		.BK
2	Glass lid hinges 2x	SSPA0010		
3	Pan support	SSPA0960		
4	Pan support clips 4x	SSPA0041		
	Pan support clips 50x	SSPA0042		
5	Burner assy medium	SSPA0812		
6	Burner assy small	SSPA0811		
7	Thermocouples hob		For lid shut off	
	Front left	SSPA0680	SSPA0688	
	Front right	SSPA0680	SSPA0688	
	Rear Left	n.a.	n.a.	
	Rear Right	SSPA0682	SSPA0689	
8	Spark electrode 4x	SSPA0320		
9	Bump stops 2x	SSPA0040		
10A	Gas tap burner 1x			
	Production date: < 14-10-2017 (E287U)	SSPA0430		
	Production date: ≥ 15-10-2017 (E288U)	SSPA0433		
10B	Gas tap grill			
	Production date: < 14-10-2017 (E287U)	SSPA0470		
	Production date: ≥ 15-10-2017 (E288U)	SSPA0474		
10C	Gas tap oven			
	Production date: < 14-10-2017 (E287U)	SSPA0450		
	Production date: ≥ 15-10-2017 (E288U)	SSPA0449		
11	Hotplate switch	SSPA0580		
12	Control knobs	<i>Refer to page 3</i>		
13	Spark ignition switch	SSPA0380		
14	Heat deflector pistons 2x	SSPA0099		
15	Heat deflector	SSPA0098		
16	Grill door	<i>Refer to page 3</i>		
17	Oven door	<i>Refer to page 4</i>		
18	Oven door seal	SSPA0060		
19	Oven shelf	SSPA0980		
20	Grill pan	SSPA0990		
21	Spark generator	SSPA0301		
22	Oven burner			
23	Electrode oven	SSPA0158	SSPA0190	
24	Thermocouple oven			
25	Grill burner			
26	Electrode grill	SSPA0182	Prod date: ≥ 12-01-2015 (E012S...)	
27	Thermocouple grill	<i>*Modification set</i>		
28	Hotplate	SSPA0550		
29	Shut off assy (=incl. nr 7)	SSPA0603		
30	Production date: < 11-01-2015 (E011S...)		<i>Refer to page 4</i>	
	Complete oven door			
	Production date: ≥ 12-01-2015 (E012S...)			
	Glass, inner door (drop down)	SSPA0250		
	Glass, inner door (side open)	SSPA0251		

Control knobs


Control Knob sets

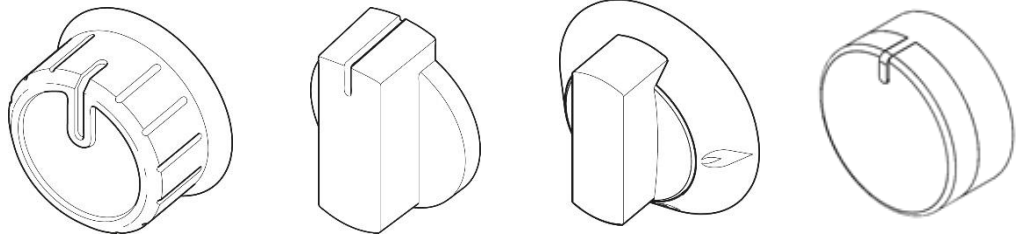


Spare part number	SSPA0900	SSPA0901	SSPA0902	SSPA0933
Colours available	Brushed-Nickel/Black (.BNK/BK)	Black (.BK) Chrome (.CR)	Chrome (.CR)	Chrome (.CR) Capped knobs
Set quantity	6	6	6	6

Cladding styles


No cladding

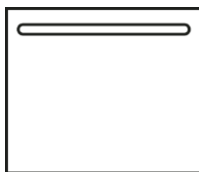

Side cladding

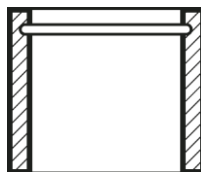

Behind handle cladding

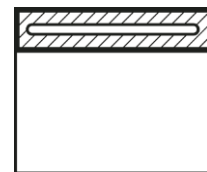


Grill Doors

Spare part number	Glass	Print	Cladding	Cladding Position	Handle Style	Handle Colour
SMAO6750.BKX	Clear	Black	No	N/A		Brushed Nickel
SMAO6750.BK01X	Clear	Black	No	N/A		Chrome
SMAO6750.BK02X	Smoked	Black	No	N/A		Chrome
SMAO6750.BK03X	Clear	Black	Brushed Nickel	Sides		Brushed Nickel
SMAO6750.BK04X	Smoked	Black	Stainless	Behind Handle		Chrome
SMAO6750.BK05X	Clear	Black	Brushed Nickel	Sides		Chrome


XXXXX = not available anymore

Oven door styles


Drop down oven doors

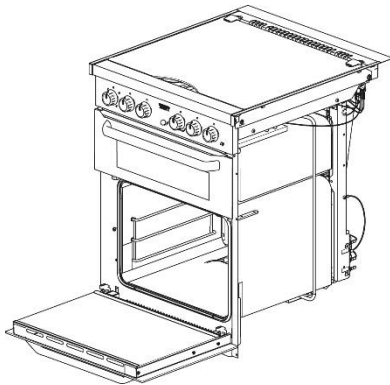

Left hinged oven doors

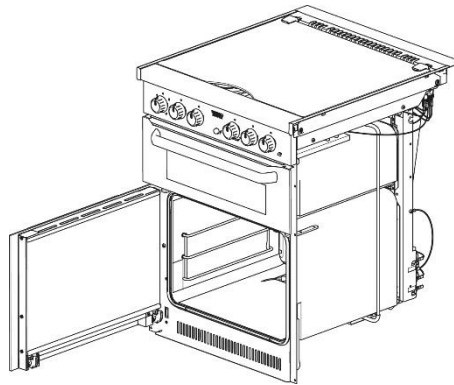

Right hinged oven doors

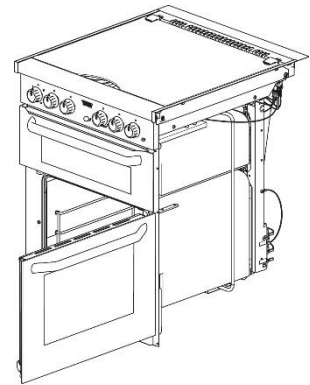

Drop down oven doors

Spare part number	Glass	Print	Cladding	Cladding Position	Handle Style	Handle Colour
SMAO6761.BKX	Clear	Black	No	N/A		Brushed Nickel
SMAO6761.BK01X	Clear	Black	No	N/A		Chrome
SMAO6761.BK02X	Smoked	Black	No	N/A		Chrome
SMAO6761.BK03X	Clear	Black	Brushed Nickel	Sides		Brushed Nickel
SMAO6761.BK04X	Smoked	Black	Stainless	Behind Handle		Chrome
SMAO6761.BK05X	Clear	Black	Stainless	Sides		Brushed Nickel

Left hinged oven doors

Spare part number	Glass	Print	Cladding	Cladding Position	Handle Style	Handle Colour
SMAO6767.BKLX	Clear	Black	No	N/A		Brushed Nickel
SMAO6767.BK02LX	Clear	Black	No	N/A		Chrome
SMAO6767.BK04LX	Smoked Clear	Black	Stainless	Behind Handle		Chrome

Right hinged oven doors

Spare part number	Glass	Print	Cladding	Cladding Position	Handle Style	Handle Colour
SMAO6768.BKRX	Clear	Black	No	N/A		Brushed Nickel
SMAO6768.BK02RX	Clear	Black	No	N/A		Chrome